

8. THROTTLE CABLE ADJUSTMENT

- (1) Put the shift lever in NEUTRAL and turn the throttle grip to START position.
- (2) Adjust the length of the cable so that the throttle arm contacts with the shift arm by turning the lock nuts.
- (3) Tighten the lock nuts securely.
- (4) Close the throttle grip fully and adjust the stop screw so that the carburetor throttle is fully closed.
- (5) After adjustment, shift the engine into each position and make sure that it attains the following maximum speeds.

Maximum engine speed:

Engine Serial Number 1000004-1399999:

F BF75: 5,200 rpm BF100: 5,700 rpm

N 5,000 ± 200 rpm


R 3,200 ± 200 rpm

Engine Serial Number 1400001 and subsequent:

F 5,500 rpm

N 5,000 ± 200 rpm

R 3,000 ± 200 rpm

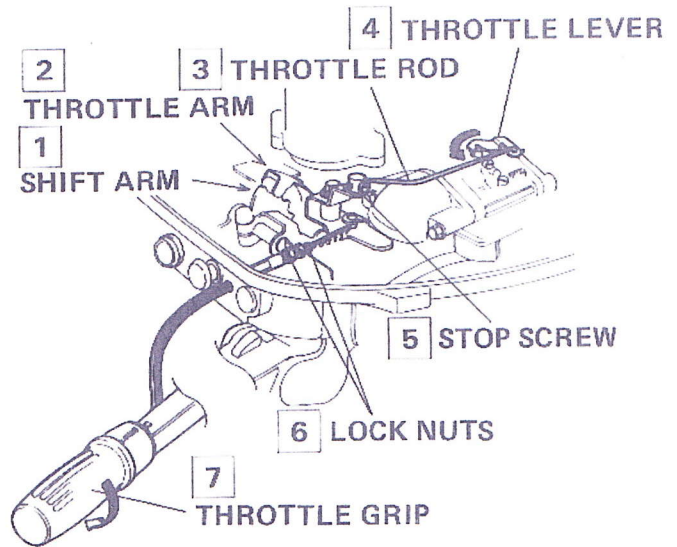


9. THROTTLE GRIP FRICTION ADJUSTMENT

Engine Serial Number 1000004-1299999:

- (1) Adjust the friction by turning the throttle grip end screw.


- (A) Turn to RIGHT: To tighten
- (B) Turn to LEFT: To loosen

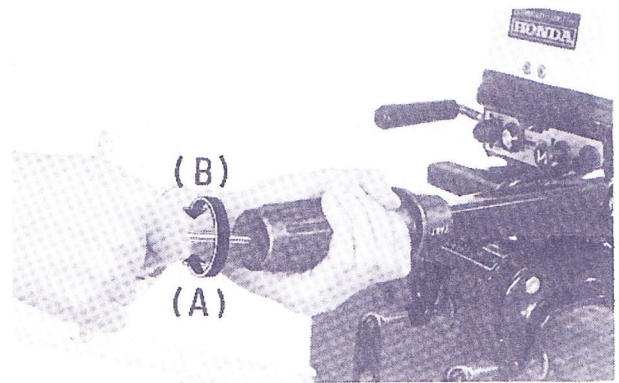

Engine Serial Number 1300001 and subsequent:

- (1) Adjust the friction by turning the throttle grip end adjuster.

- (A) Turn to RIGHT: To tighten
- (B) Turn to LEFT: To loosen

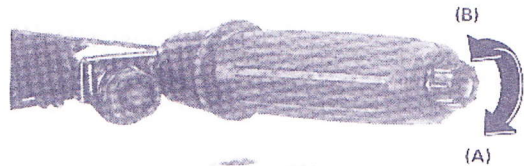

10. STEERING HANDLEBAR FRICTION ADJUSTMENT

- (1) Adjust the friction by turning the adjusting bolt on the swivel case.

- (A) Turn to RIGHT: To tighten
- (B) Turn to LEFT: To loosen

